



ENVOY AUTHORITY22®

Score King


Crosswise Ratios (by units)

Zone 1		Average	Ratio	Zone 5		Average	Ratio
3L-7L	Left =	22.4	3.5	3L-7L	Left =	0.0	#DIV/0!
3R-7R	Right =	22.4	3.5	3R-7R	Right =	0.0	#DIV/0!
18L-18R	Center =	80.0		18L-18R	Center =	0.0	
Zone 2		Average	Ratio	Zone 6		Average	Ratio
3L-7L	Left =	15.4	4.3	3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right =	15.4	4.3	3R-7R	Right =	#DIV/0!	#DIV/0!
18L-18R	Center =	67.0		18L-18R	Center =	#DIV/0!	
Zone 3		Average	Ratio	Zone 7		Average	Ratio
3L-7L	Left =	9.4	5.8	3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right =	9.4	5.8	3R-7R	Right =	#DIV/0!	#DIV/0!
18L-18R	Center =	55.0		18L-18R	Center =	#DIV/0!	
Zone 4		Average	Ratio	Zone 8		Average	Ratio
3L-7L	Left =	6.4	5.4	3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right =	6.4	5.4	3R-7R	Right =	#DIV/0!	#DIV/0!
18L-18R	Center =	35.0		18L-18R	Center =	#DIV/0!	

Crosswise Ratios (by ml)

Zone 1		Average	Ratio	Zone 5		Average	Ratio
3L-7L	Left =	0.075	3.5	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right =	0.075	3.5	3R-7R	Right =	0.000	#DIV/0!
18L-18R	Center =	0.268		18L-18R	Center =	0.000	
Zone 2		Average	Ratio	Zone 6		Average	Ratio
3L-7L	Left =	0.045	4.3	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right =	0.045	4.3	3R-7R	Right =	0.000	#DIV/0!
18L-18R	Center =	0.197		18L-18R	Center =	0.000	
Zone 3		Average	Ratio	Zone 7		Average	Ratio
3L-7L	Left =	0.047	5.8	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right =	0.047	5.8	3R-7R	Right =	0.000	#DIV/0!
18L-18R	Center =	0.277		18L-18R	Center =	0.000	
Zone 4		Average	Ratio	Zone 8		Average	Ratio
3L-7L	Left =	0.016	5.4	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right =	0.016	5.4	3R-7R	Right =	0.000	#DIV/0!
18L-18R	Center =	0.088		18L-18R	Center =	0.000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

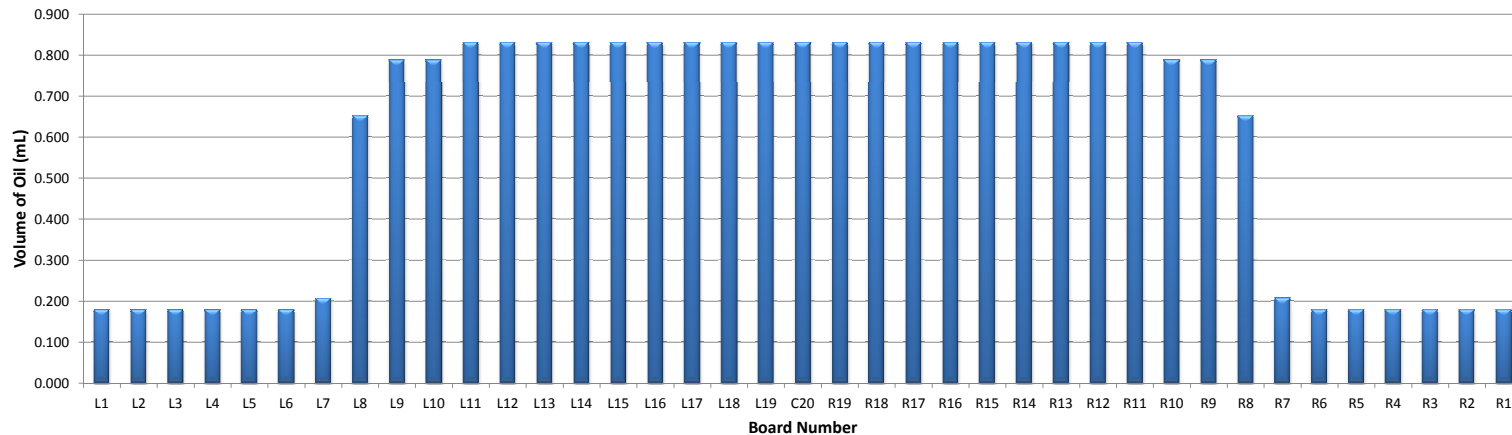

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
4.52	1	4.52